Pioneer

NAVIGATION AV SYSTEM

AVIC-F30BT

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to Operation Manual.

Basic hardware buttons

① **button**
Press briefly to activate voice operation.
Press and hold to mute the AV (Audio and Video) source.

② **VOL (+/–) button**
Press to adjust the AV source volume.

③ **HOME button**
Press to display the "**Top Menu**" screen.

④ **MODE button**
Press to switch between the map screen and the AV operation screen.

⑤ **TRK (◄/►) button**

⑥ **⏏ button**
Press to display the "**Monitor Setup**" screen.

Published by Pioneer Corporation.
Copyright © 2010 by Pioneer Corporation.
All rights reserved.
<KYTZX> <10L00000>

Printed in Thailand
<CRB3604-A/N> EU

Screen switching overview

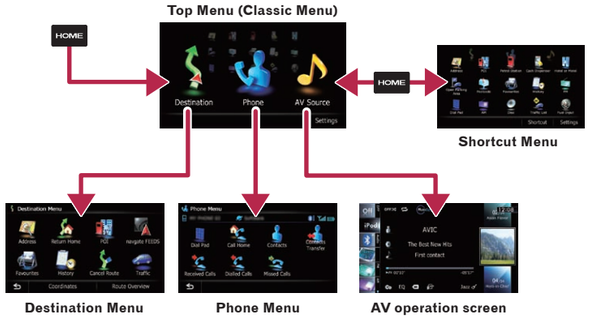

Basic items on the map

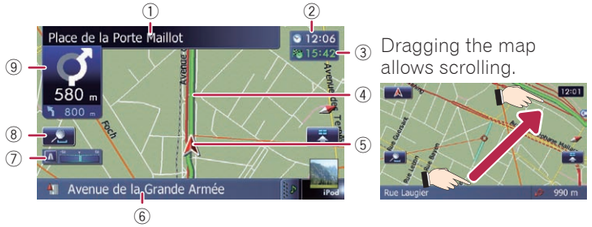

① Name of the street to be used (or next guidance point)
② Current time
③ Estimated time of arrival (default)
④ Current route
⑤ Current position
⑥ Street name that your vehicle is travelling along
⑦ Eco-Meter
⑧ Map control
⑨ Next direction of travel

Destination Menu

Touch Destination on the "Top Menu" screen.

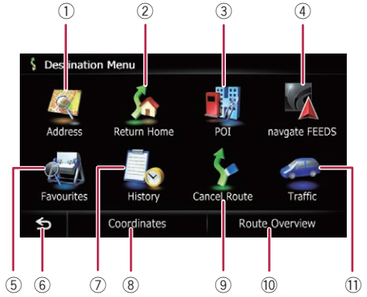

① Searches for a location by address
② Calculates the route to your home
③ Searches for a place such as stores, restaurants, and other facilities (Points Of Interest – POI) in the database
④ Searches for POIs by using the data on the SD memory card
⑤ Stores and selects your favourite locations
⑥ Returns to the previous screen
⑦ Selects a previously routed destination
⑧ Searches for a location by coordinates
⑨ Cancels your current route guidance
⑩ Displays the current route information
⑪ Displays traffic information

Searching for your destination by address

1 Display the "Destination Menu" screen and touch Address.

2 Select the country you desire.

3 Input the information that you want to set as the destination.

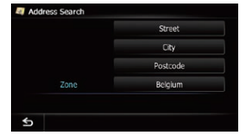

Touch one of the options. After narrowing down your destination, the Location confirmation screen will appear.

4 Touch OK.

After searching for the destination, the Route confirmation screen appears.

5 Touch OK.

The navigation system gives you route guidance both visually and by voice.

Setting route guidance volume

1 Touch the keys in the following order on the "Top Menu" screen.

Settings ➡ System Settings ➡ Volume

2 Touch + or – to change the volume of the route guidance.

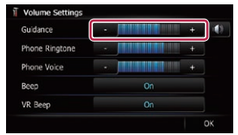

Inserting and ejecting an SD memory card

For details about playable files, refer to Operation Manual.

Inserting an SD memory card

1 Press the ⏏ button.
The "**Monitor Setup**" screen appears.

2 Touch SD Insert.

3 Insert an SD memory card into the SD card slot until it clicks.

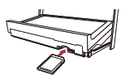

4 Press the ⏏ button.

Ejecting an SD memory card

1 Press the ⏏ button.
The "**Monitor Setup**" screen appears.

2 Touch Eject SD.
The LCD panel opens.

3 Press the middle of the SD memory card gently until it clicks.

4 Pull the SD memory card out straight.

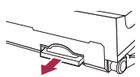

5 Press the ⏏ button.

Using the radio (FM)

Scroll the screen by dragging an AV source icon up or down, and tap FM on the AV operation screen.

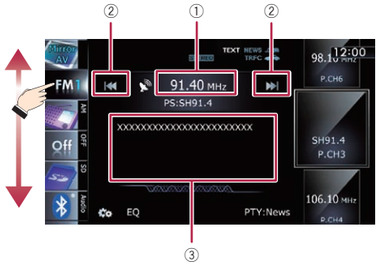

① Displays the current preset frequency

② Scans frequencies until a broadcast strong enough for good reception is found by touching and holding (seek tuning)

③ Displays the detailed radio text currently received

Playing your Apple iPod

You can control an iPod by connecting the USB interface cable for iPod (CD-IU51V) (sold separately) to the navigation system.

1 Connect your iPod.

The source changes and then playback will start.

2 Tap or drag the key that you want to operate.

iPod operation screen

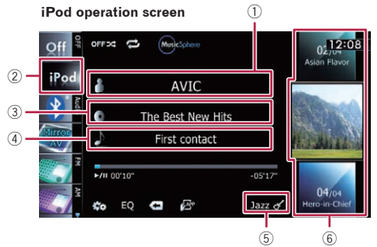

List screen (e.g. song list)

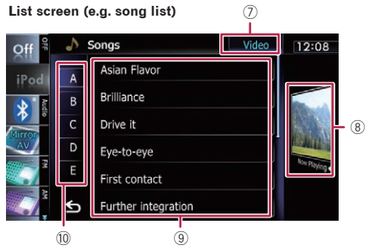

① Displays the artist name list

② Displays the category list

③ Displays the album title list

④ Displays the song title list

⑤ Displays the genre list

⑥ Selects the song to play by scrolling the keys up or down. To play the song, tap it

⑦ Switches the list screen between music and video

⑧ Returns to the iPod operation screen

⑨ Starts playback by tapping an item to select

⑩ Selects a song by scrolling the character tab up or down. Tap the tab of the character for the song title that you want to display

Pairing your phone

1 Activate the Bluetooth® function on your phone.

2 Touch the keys in the following order on the "Top Menu" screen.

Settings ➡ Bluetooth Settings

3 Touch Bluetooth On/Off to select On.

4 Touch Registration on the "Bluetooth Settings" screen.
The system searches for and lists nearby devices.

5 Touch your phone on the list.

6 Enter the PIN code from your phone. (The default code is 1111.)
When pairing succeeds, a message will appear.

Transferring the phone book

1 Connect the mobile phone.

2 Touch Contacts Transfer on the "Phone Menu" screen.

3 Check that the following screen is displayed, and operate your mobile phone to transfer the phone book entries.

When data transfer is finished, a message asking whether you want to transfer more data appears.

4 Touch No.

The transferred data is imported to the navigation system.